



# Combining in-situ measurements in molecular beam epitaxy : Study of AlGaAs properties at growth temperature

Pierre Gadras, Léopold Bourdon, Antoine Fées, Karim Ben Saddik, Guilhem Almuneau, Alexandre Arnoult, Quentin Gravelier

## ► To cite this version:

Pierre Gadras, Léopold Bourdon, Antoine Fées, Karim Ben Saddik, Guilhem Almuneau, et al.. Combining in-situ measurements in molecular beam epitaxy : Study of AlGaAs properties at growth temperature. VCSEL Day 2024, Sep 2024, Toulouse, France. . hal-04710142

HAL Id: hal-04710142

<https://cnrs.hal.science/hal-04710142v1>

Submitted on 27 Sep 2024

**HAL** is a multi-disciplinary open access archive for the deposit and dissemination of scientific research documents, whether they are published or not. The documents may come from teaching and research institutions in France or abroad, or from public or private research centers.

Public Domain

L'archive ouverte pluridisciplinaire **HAL**, est destinée au dépôt et à la diffusion de documents scientifiques de niveau recherche, publiés ou non, émanant des établissements d'enseignement et de recherche français ou étrangers, des laboratoires publics ou privés.

# Combining in-situ measurements in molecular beam epitaxy: Study of $Al_xGa_{1-x}As$ properties at growth temperature

P. Gadrás, L. Bourdon, A. Fées, K. Ben Saddik, G. Almuneau, A. Arnoult

## Motivations

Better control over epitaxy process is a key element for the realization of high performances VCSELs. However, no universal practical tool has been implemented to date.

With EpiCentre, joint lab with Riber, we're working on combining *in-situ* measurements in molecular beam epitaxy (MBE) to achieve advanced materials growth control in real time.

### In-situ tools:


- Reflection high-energy electron diffraction (RHEED)
- Atomic Absorption of fluxes
- **Spectral reflectance**
- Curvature measurement
- Band-edge measurement

- ✓ Surface morphology
- ✓ Cells fluxes
- ✓ **Growth rates**
- ✓ Compositions
- ✓ Substrate temperature

### Feed-back control

### Optical constants

### Band-gap, Doping

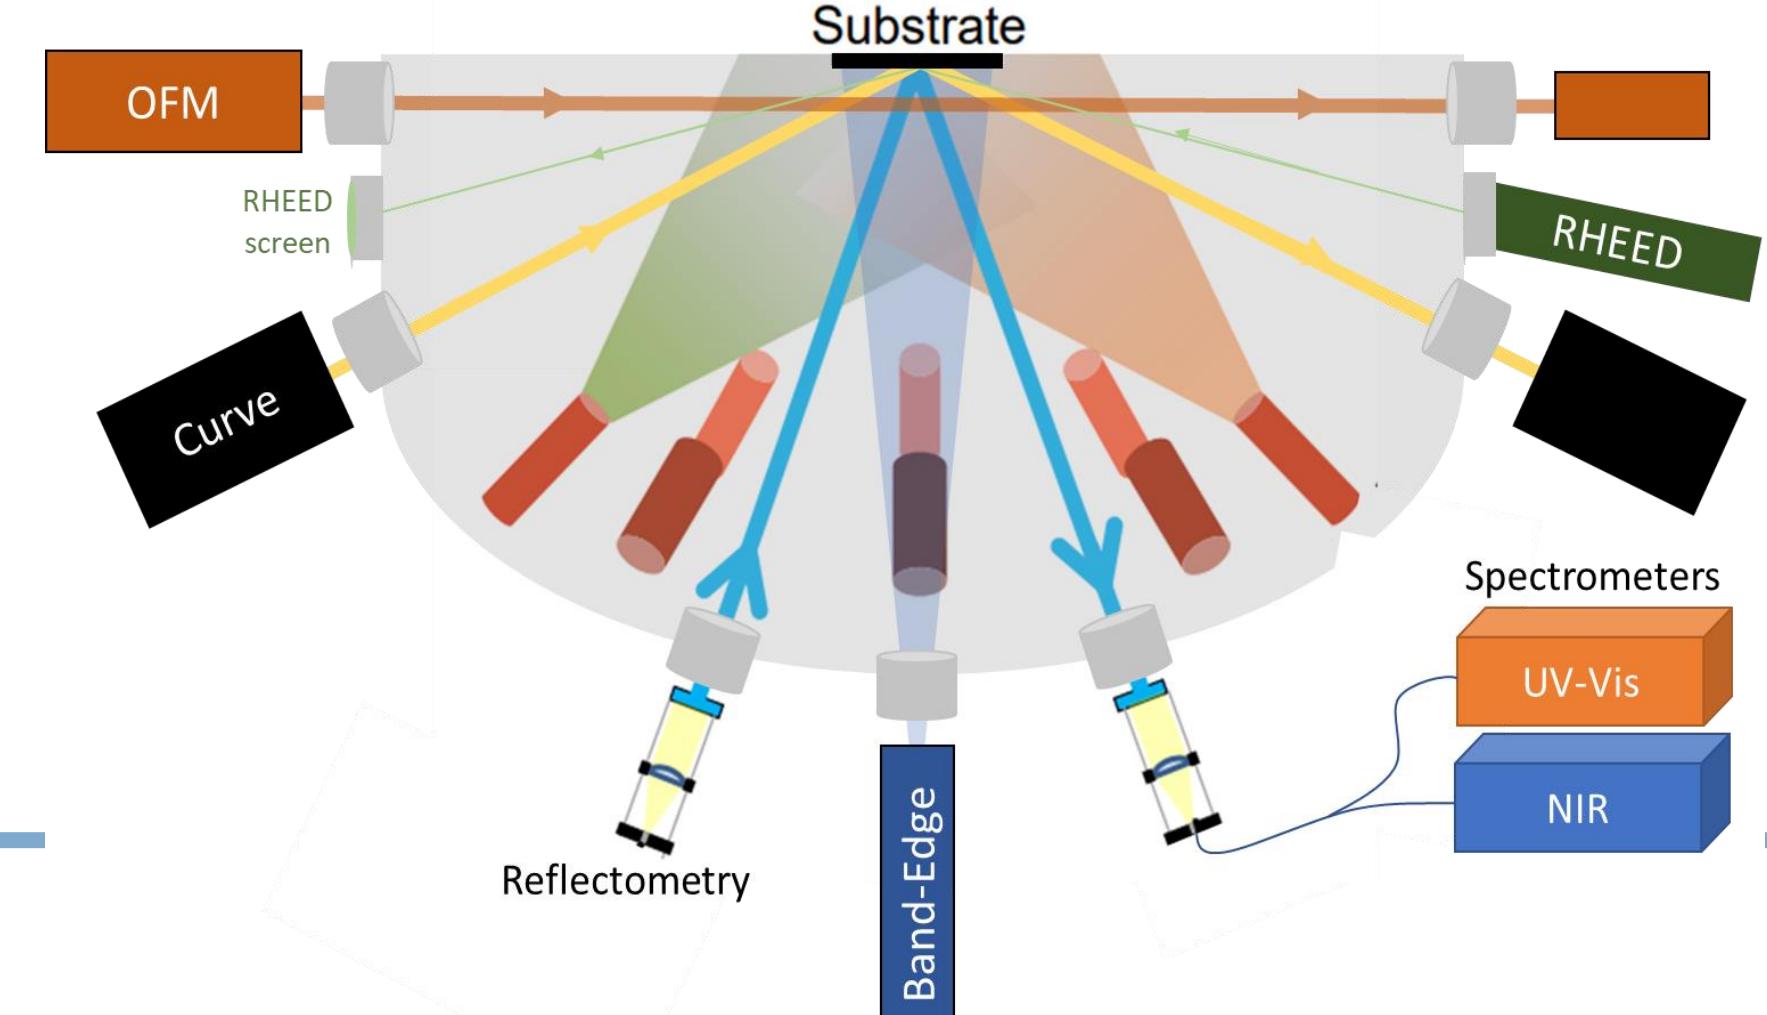

## How to precisely measure optical indices at growth temperature ?

### In-situ measurement : Spectral Reflectometry

To measure optical indices, we grow a layer of **known composition** and measure *in-situ* in real time the spectral reflectance.

In the same time, we determine the **growth temperature** through band-edge thermometry (BandiT)


$$\text{Simple model of optical reflectance oscillations [1]:}$$

$$R(t) = \left| \frac{r_\infty + r_i e^{-i\delta t}}{1 + r_\infty r_i e^{-i\delta t}} \right|^2, \quad \delta \approx \frac{4\pi \tilde{n} G}{\lambda} * \cos(\theta)$$

with,  $r_\infty$ : reflectance coefficient between the layer/air  
 $r_i$ : reflectance coefficient between the layer/substrate  
 $\tilde{n}$ : complex optical index of the growing film  
 $G$ : growth rate  
 $\theta$ : Angle of incidence of the light

Approximation in case of similar high refractive index film substrate:  
 $R(t) = R_\infty - 2\sqrt{R_\infty R_i} (1 - R_\infty) e^{-\gamma t} * \cos(\omega t - \sigma)$   
 with,




$$n = \frac{\omega \lambda}{4\pi G \cos(\theta)}, \quad k = \frac{\gamma \lambda}{4\pi G \cos(\theta)}$$

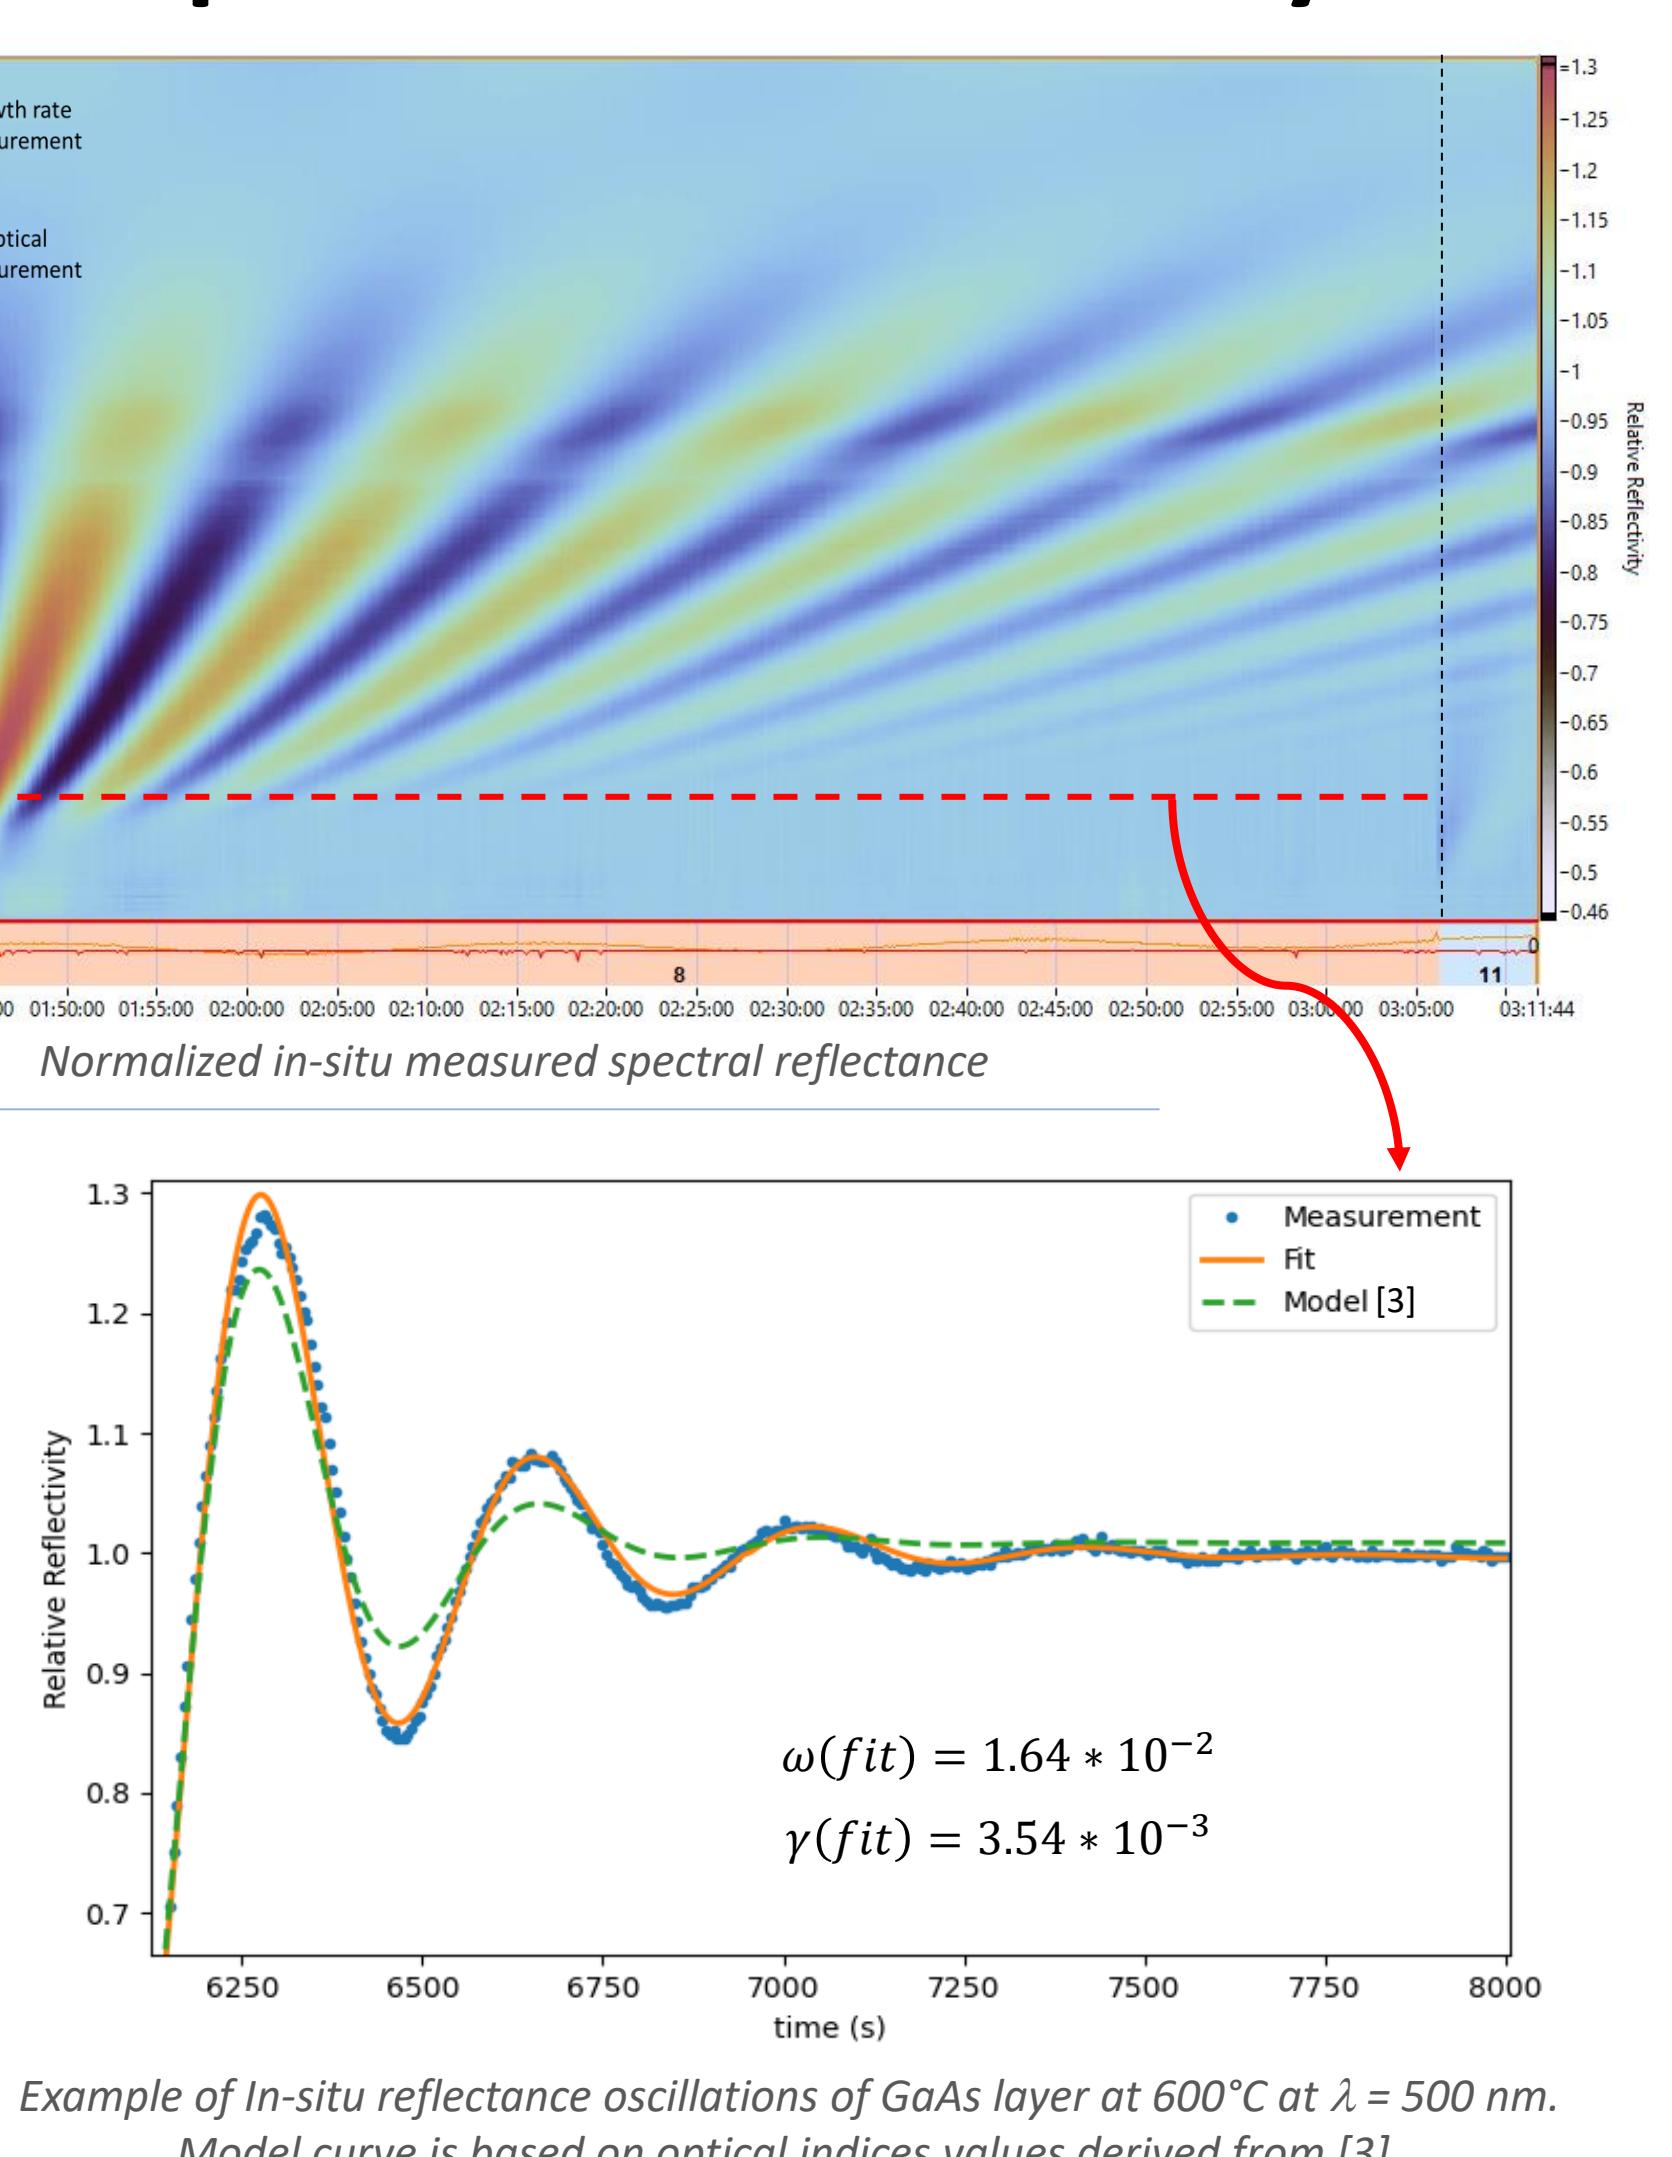

### Ex-situ measurement : X-Ray Reflectivity


Measurement method of GaAs, AlAs and  $Al_xGa_{1-x}As$  growth rates:

- Ga/Al cell shutter kept open to prevent burst effect,
- Layer thicknesses by fitting the oscillations of X-ray reflectometry with a model [2],
- Estimation of the uncertainty on the fitted thickness, using Gaussian approximation of  $\chi^2$  loss function

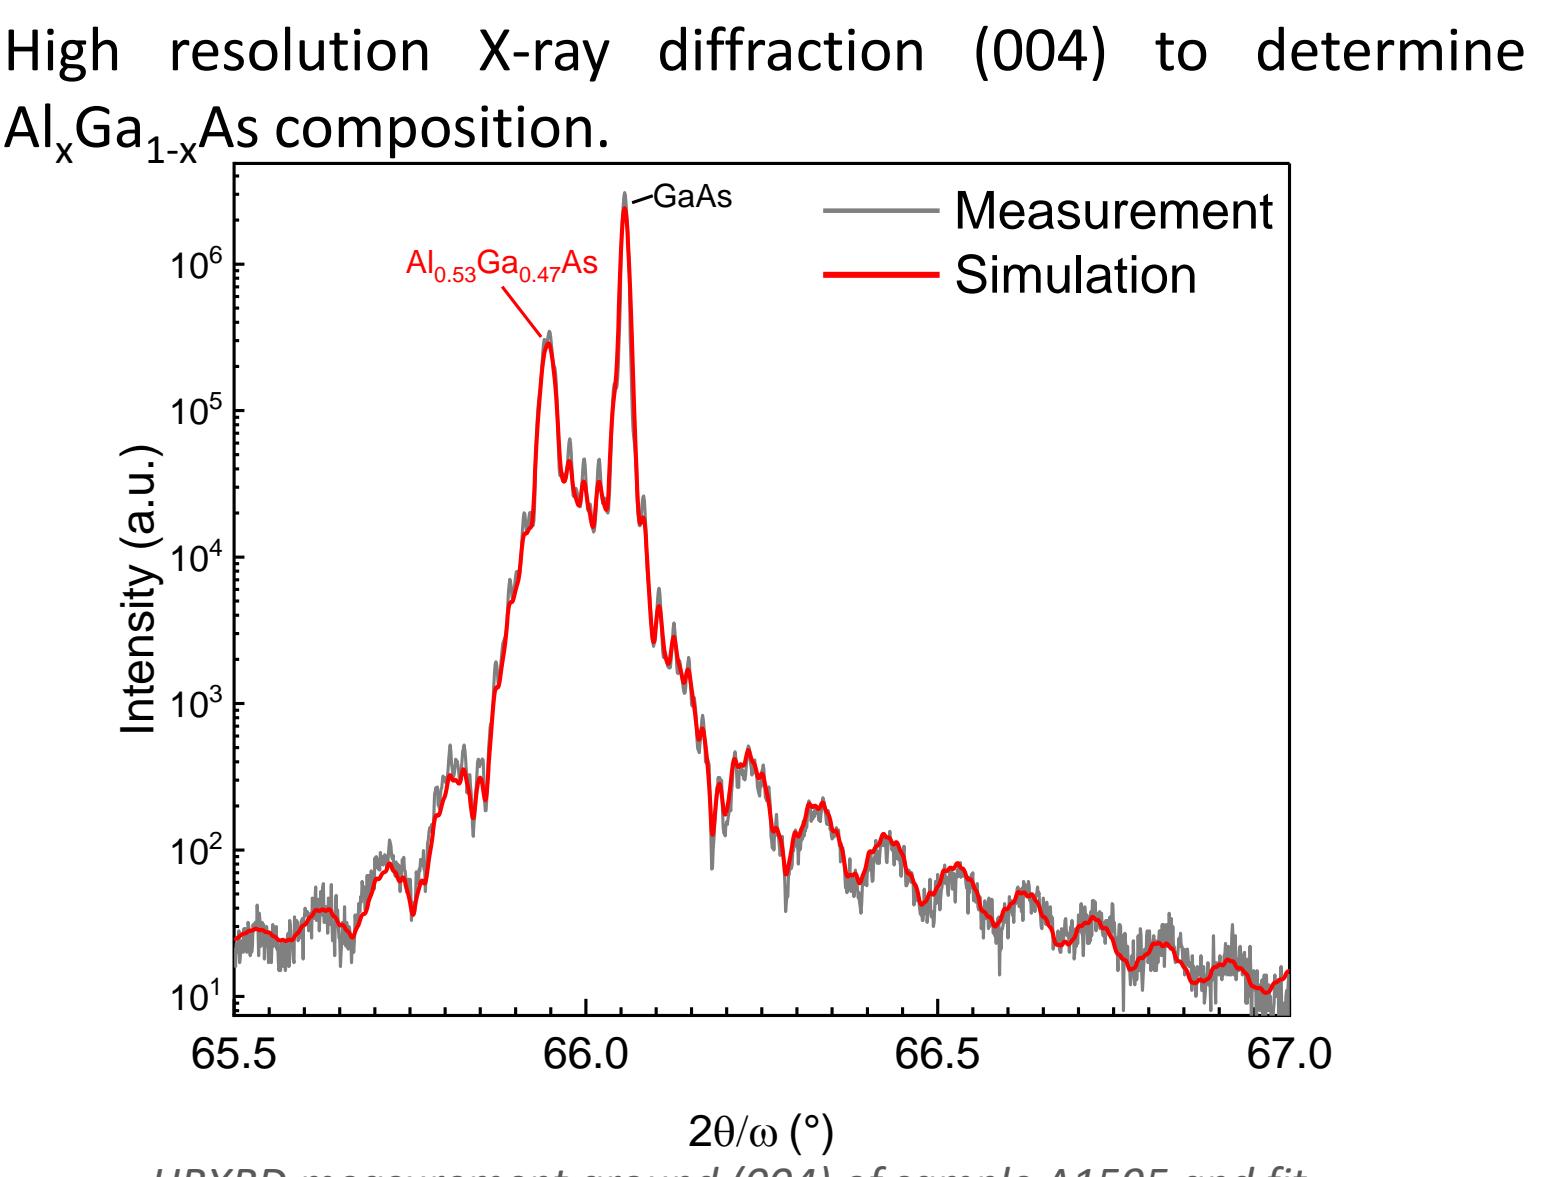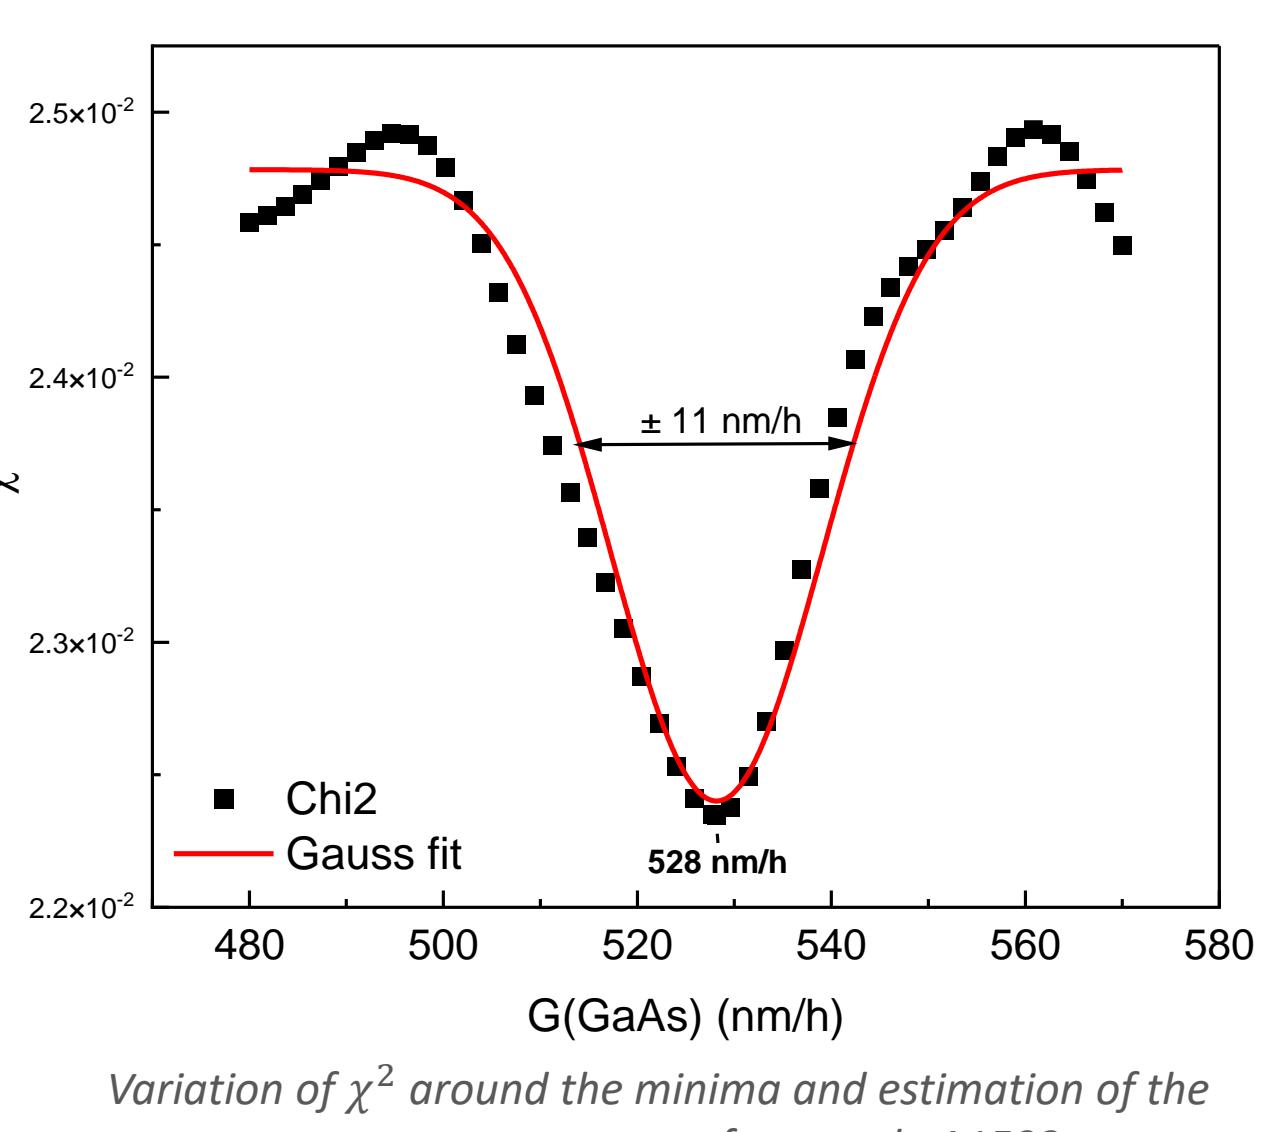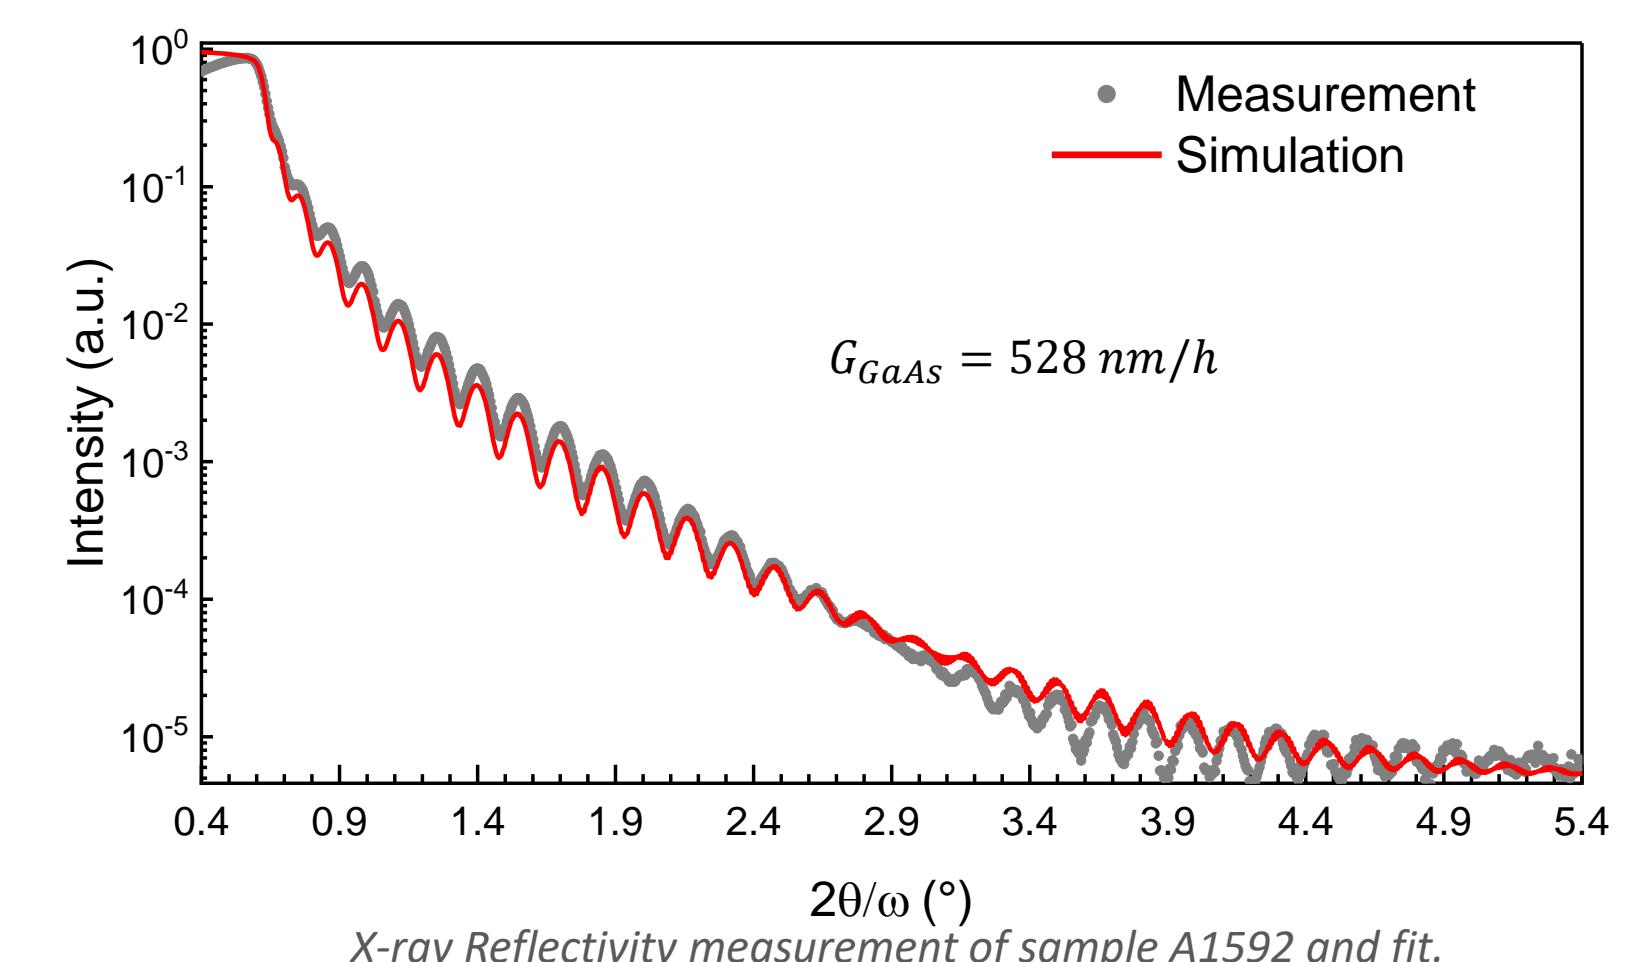


## Calculation of the spectral dispersion of the refractive indices at 600°C


### GaAs

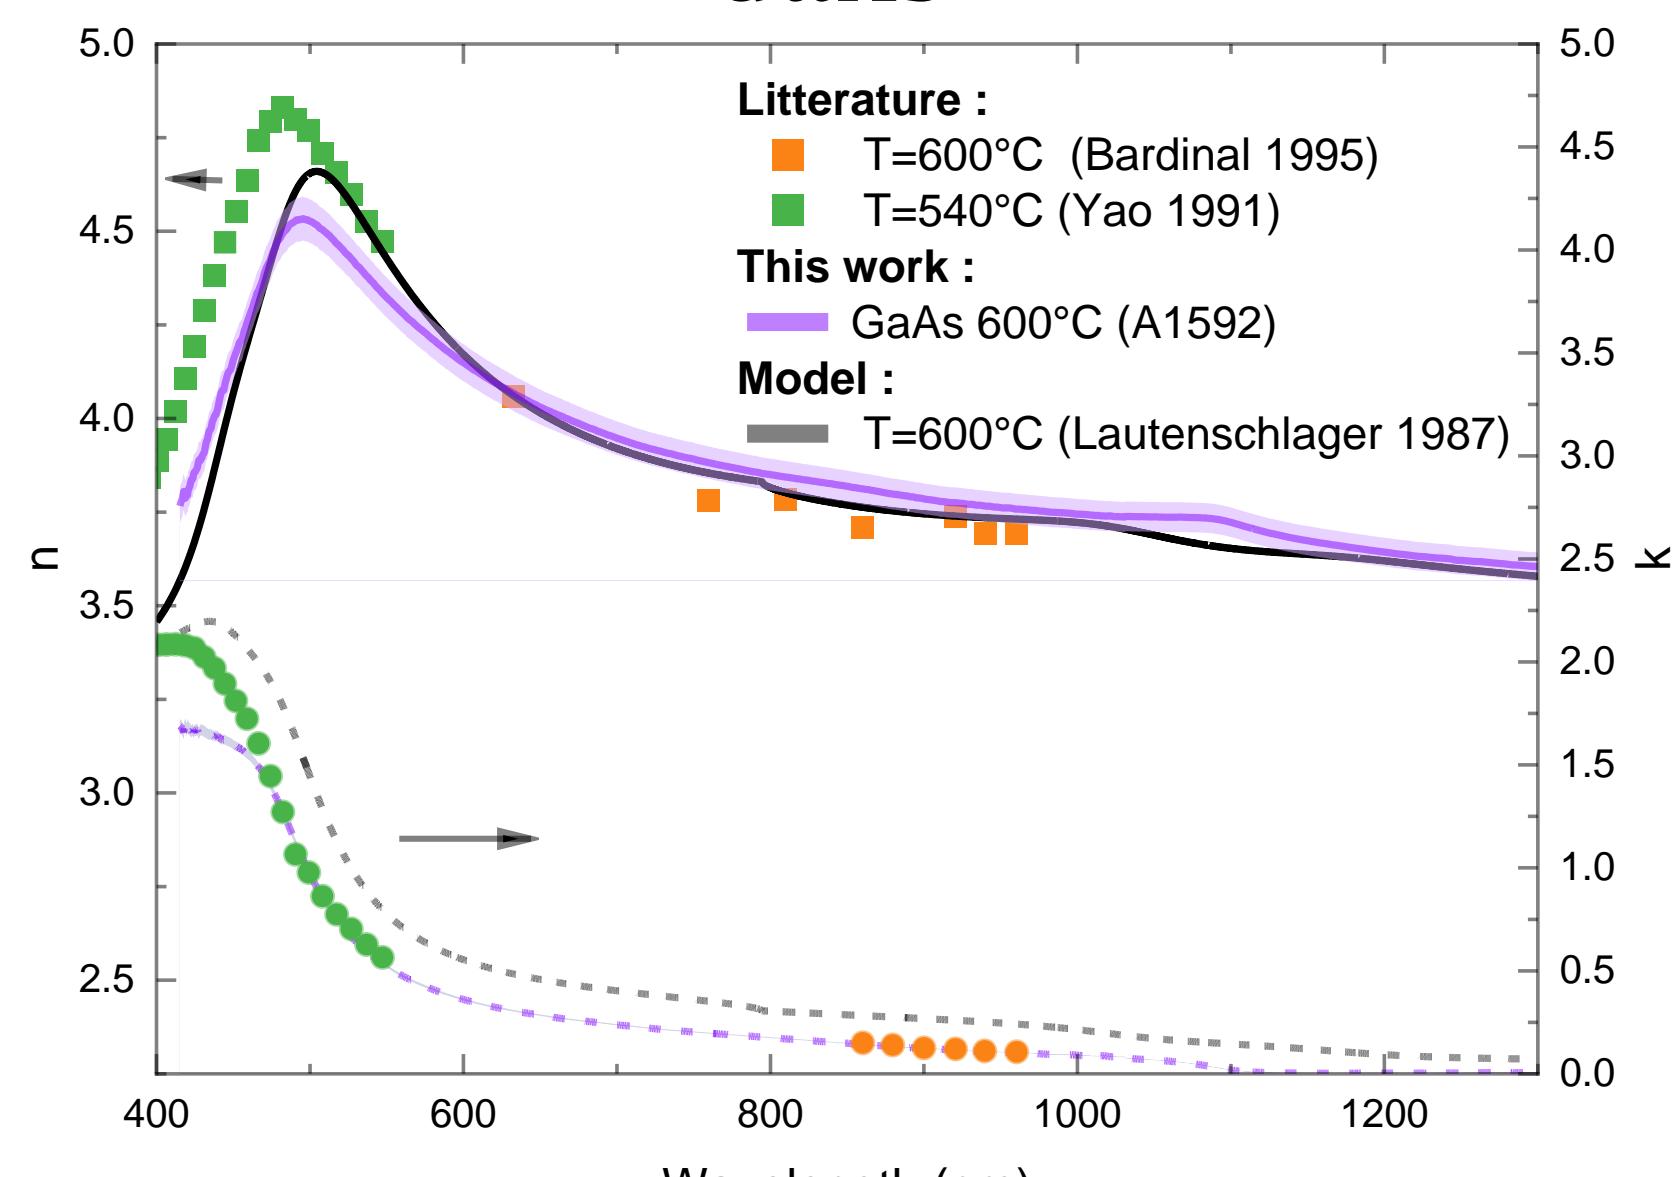

### AlAs

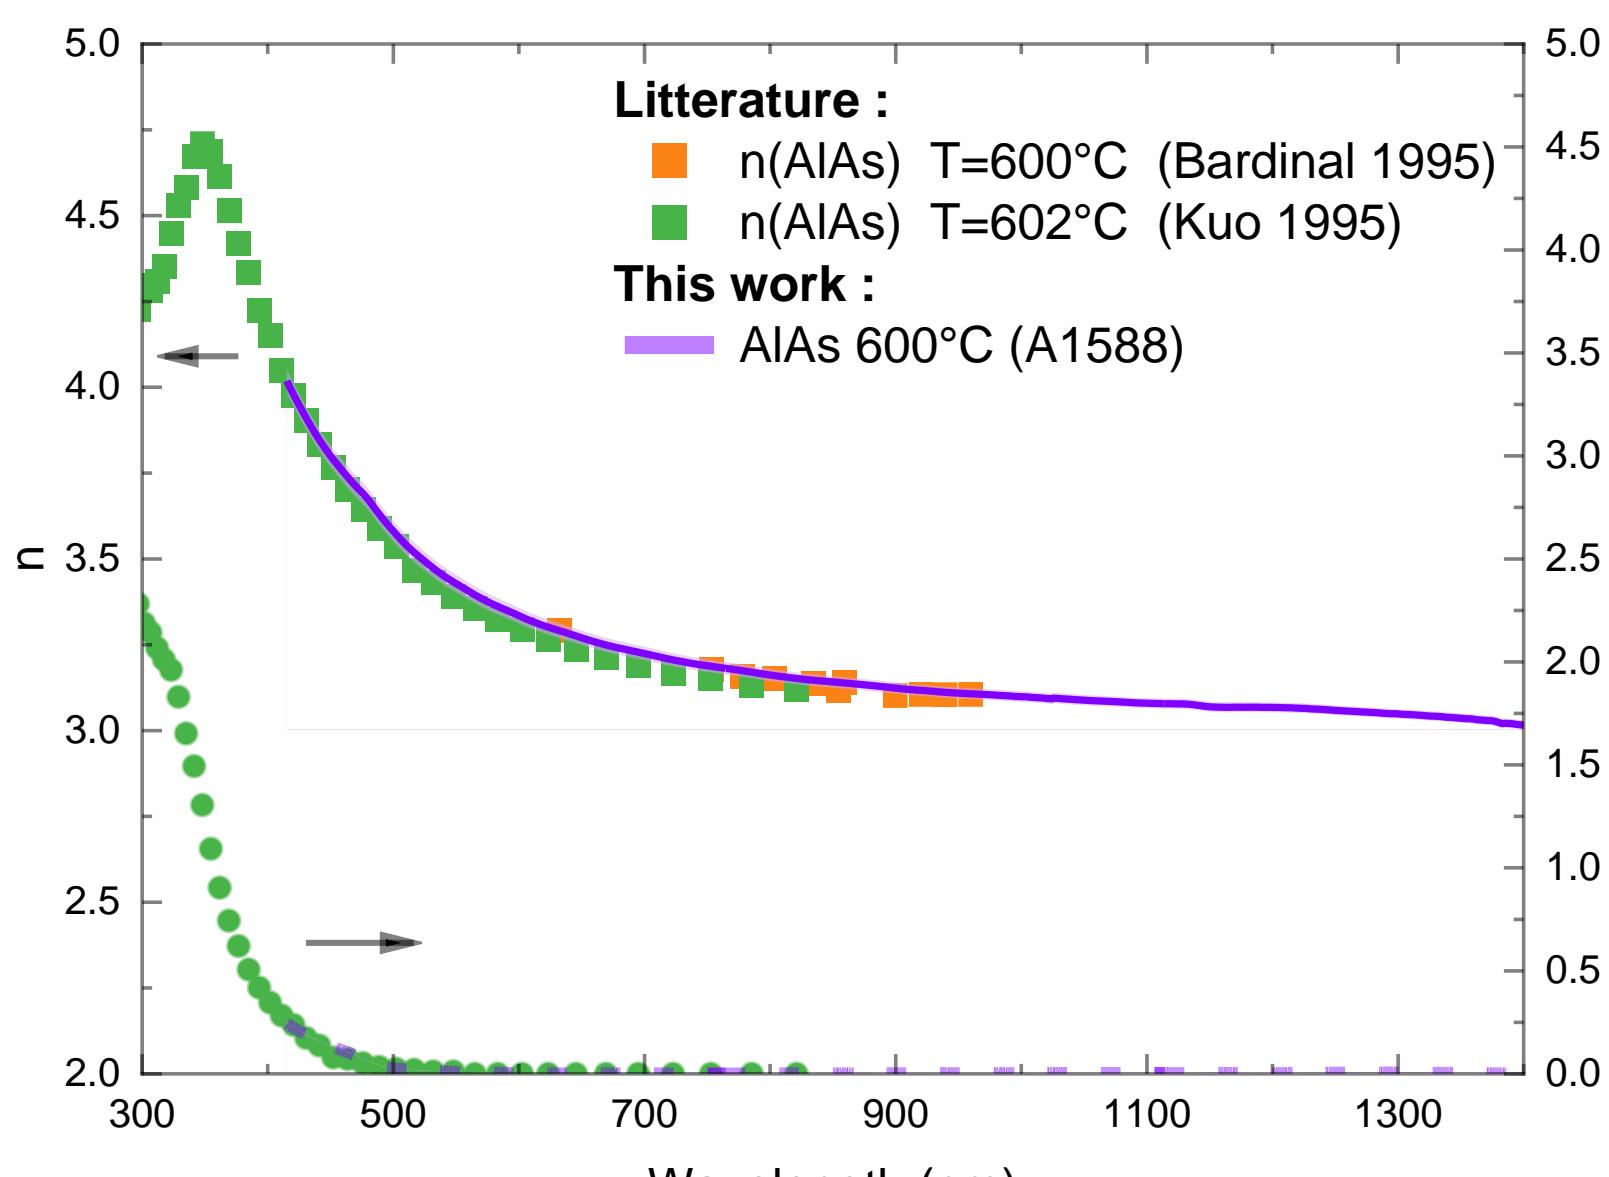

### $Al_{0.53}Ga_{0.47}As$

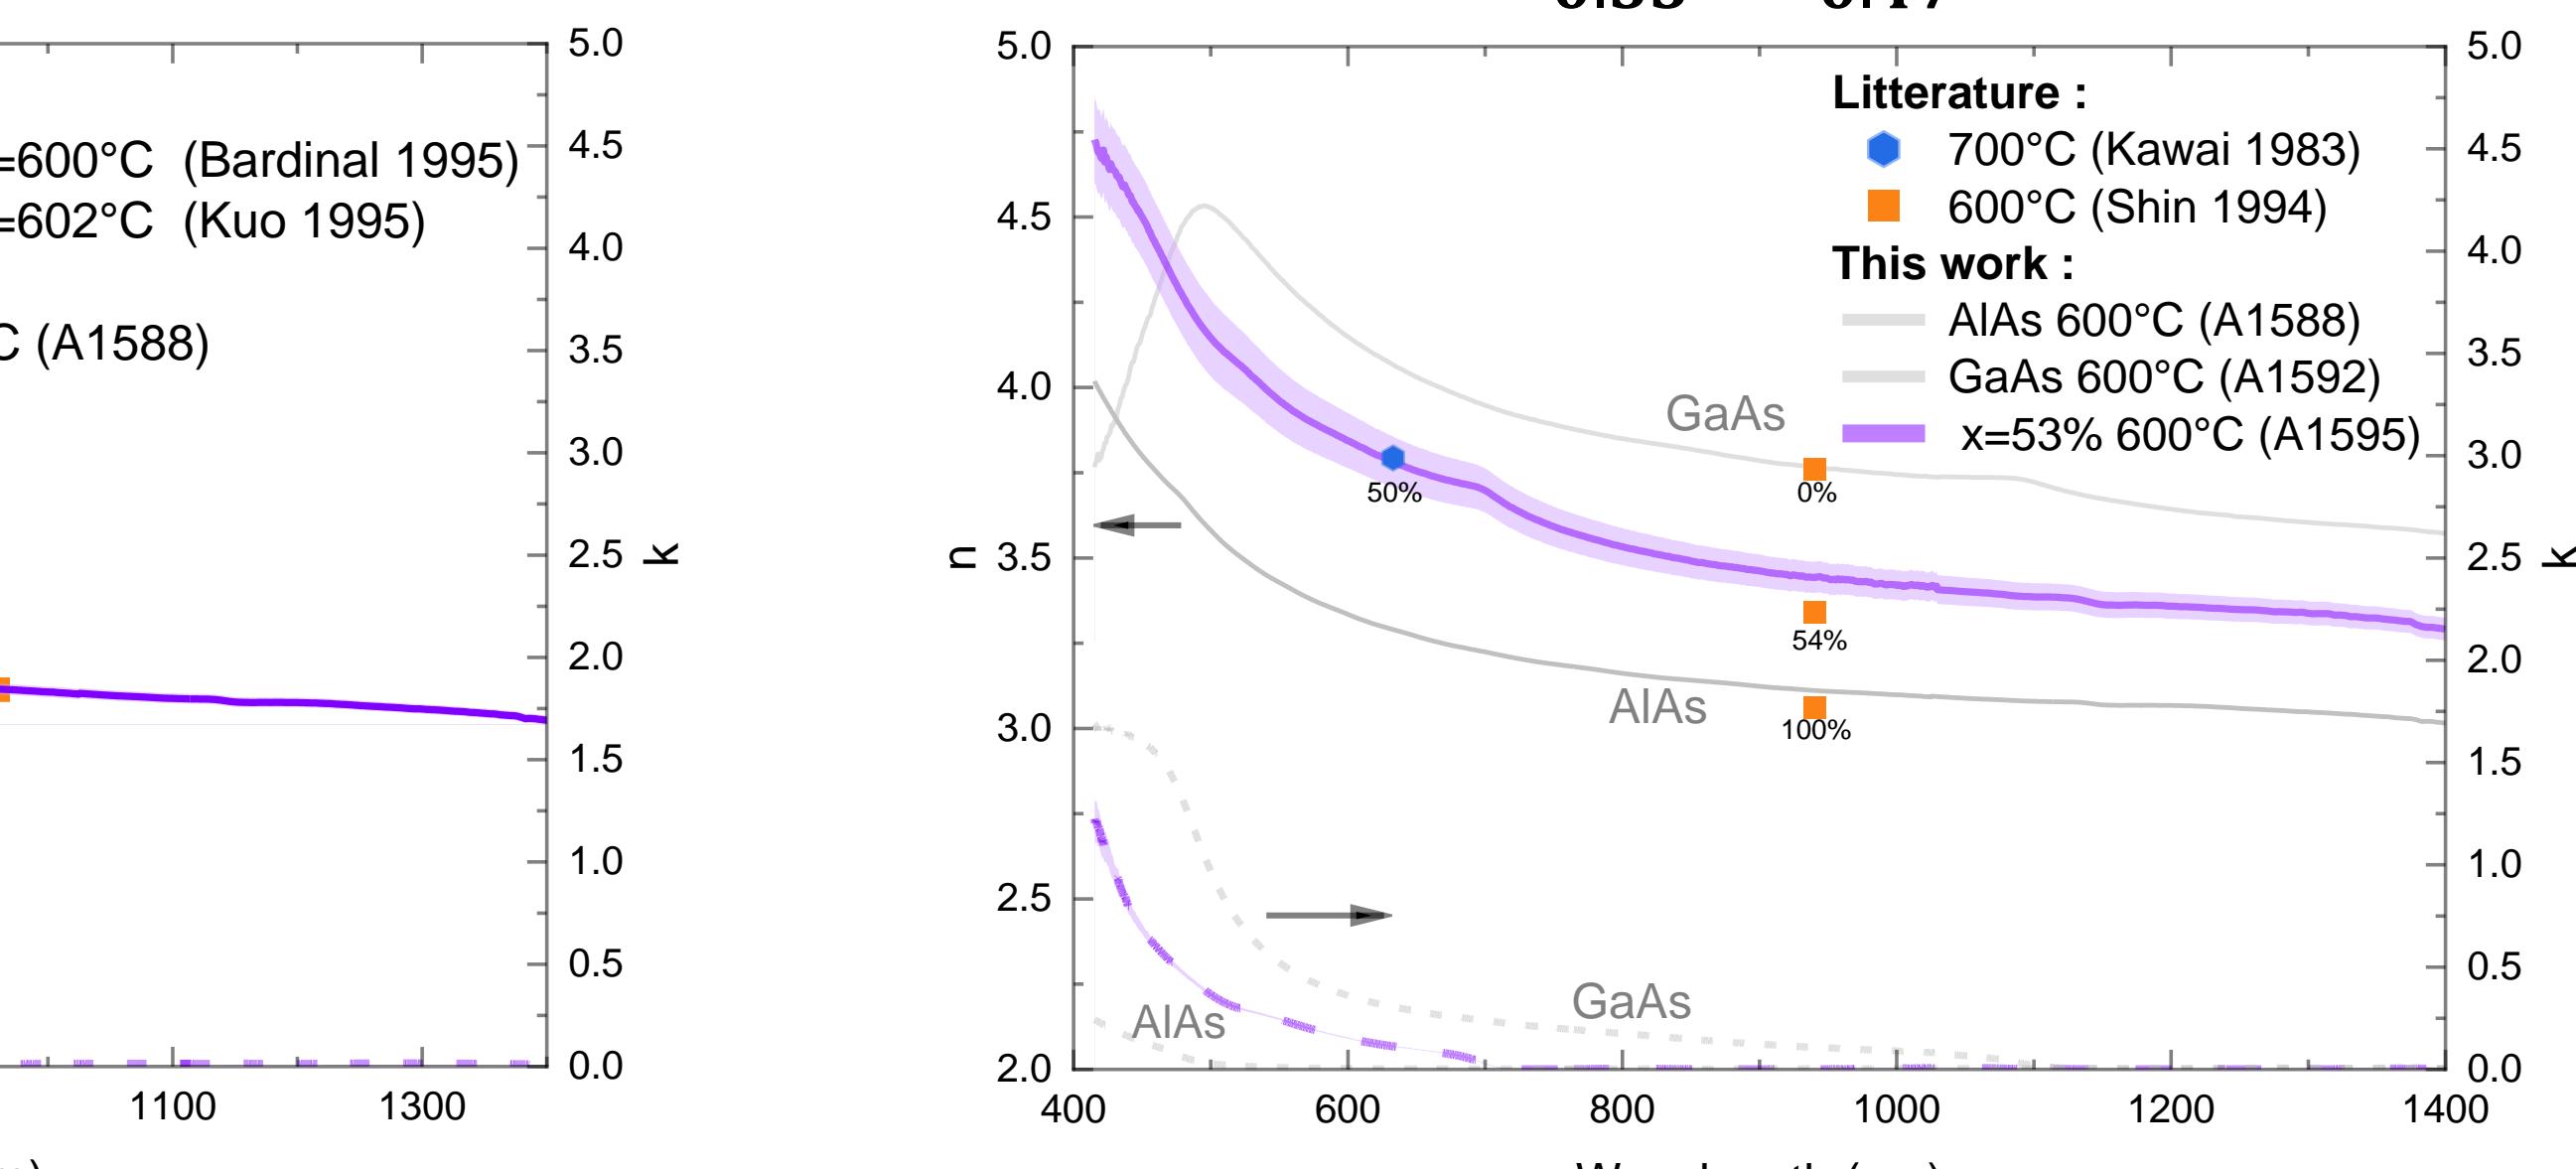

Optical indices of GaAs, AlAs and  $Al_{0.53}Ga_{0.47}As$  at growth temperature :

- Very good agreement with the scarce available data in the literature at high temperature,
- Refractive indices measured over the full spectral range available with the spectrometers (400-1400 nm)

- Measurement accuracy assessment (work in progress):


$$\Delta n = \frac{\omega}{4\pi G} \sqrt{(\Delta\lambda)^2 + \left(\frac{\lambda}{2\pi}\Delta\Lambda\right)^2 + \left(\frac{\lambda}{G}\Delta G\right)^2}$$

with:  $\Delta\lambda = \pm 4 \text{ nm}$ ,  $\Delta\Lambda = \pm 5 \text{ s}$ ,  $\frac{\Delta G}{G} \sim 1\%$  + Temperature measurement accuracy:  $\Delta T = \pm 1^\circ\text{C}$

## Perspectives

- Mid-term objective: generate **n** and **k** database for all  $Al_xGa_{1-x}As$  compositions and at various growth temperatures.
- Long-term objective: Combining in-situ measurements:
  - Using  $n(\lambda, T, x_{Al})$  database to deduce growth rate from reflectance measurement
  - With in-situ curvature measurement to extract alloy composition

Feed-back control on the process parameters for VCSEL epitaxy

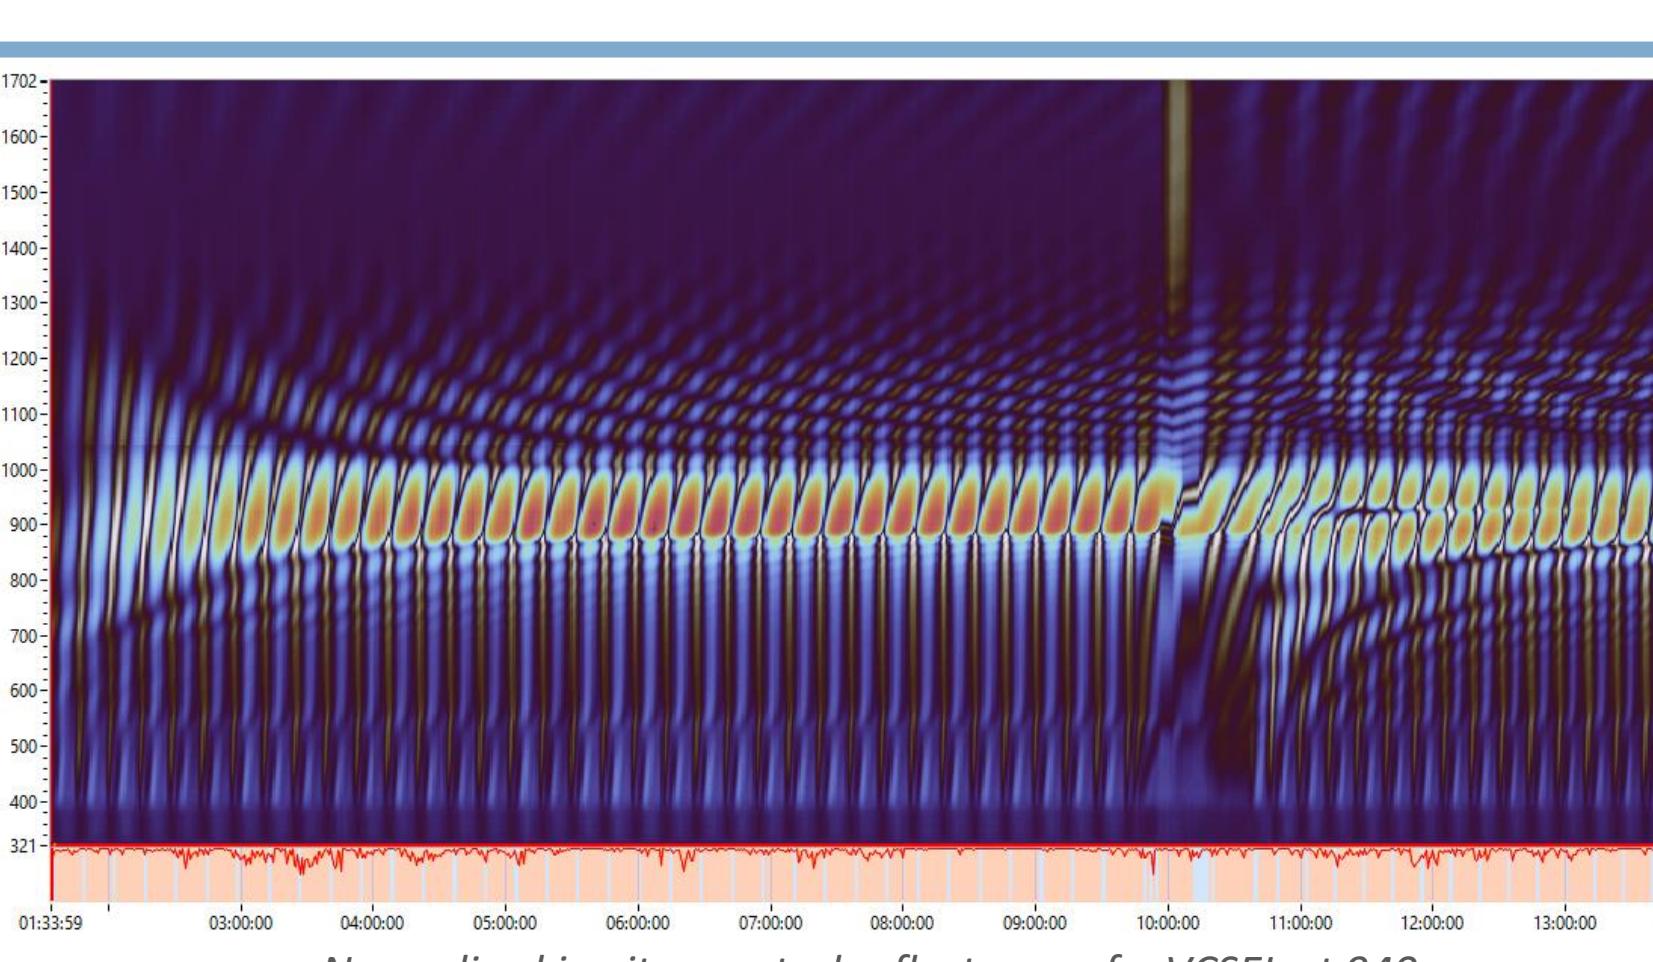

### References:

- [1] W. G. Breiland et K. P. Killeen, J. Appl. Phys. 1995 (doi: [10.1063/1.360496](https://doi.org/10.1063/1.360496))
- [2] Leptos software, <https://www.bruker.com/>
- [3] P. Lautenschlager, M. Garriga, S. Logothetidis, et M. Cardona, Phys. Rev. B 1987 (doi: [10.1103/PhysRevB.35.9174](https://doi.org/10.1103/PhysRevB.35.9174))
- [4] H. Yao, P. G. Snyder, et J. A. Woollam, J. Appl. Phys. 1991 (doi: [10.1063/1.349285](https://doi.org/10.1063/1.349285))
- [5] C. H. Kuo & al., et G. N. Maracas, JVST B. 1995 (doi: [10.1116/1.587941](https://doi.org/10.1116/1.587941))
- [6] H. Kawai, & al., J. Appl. Phys. 1987 (doi: [10.1063/1.338825](https://doi.org/10.1063/1.338825))
- [7] J.-H. Shin et Y.-H. Lee , J. Appl. Phys. 1994, (doi: [10.1063/1.357874](https://doi.org/10.1063/1.357874))
- [8] V. Bardinal, R. Legros, et C. Fontaine», Appl. Phys. Lett. 1995 (doi: [10.1063/1.114681](https://doi.org/10.1063/1.114681))

### Acknowledgments:

RENATECH (French Network of Technology Platforms) at LAAS-CNRS  
Epicentre, RIBER LAAS-CNRS joint lab

**RIBER**

**RENATECH**  
réseau national  
des grandes centrales de technologies

More  
informations



Laboratoire conventionné avec

**Université de Toulouse**